

WM20 WALL-MOUNTED THERMOMETER AND HYGROMETER



Operating Instructions

Product code:

825-882

INSTRUMENT OPERATION

- ① Up key: Adjust the setting value and option
- ① Down key: Adjust the setting value and option
- (Confirm key: Confirm the setting function

INSTRUMENT CALIBRATION - In the display temperature and humidity interface, press the a and r keys simultaneously for three seconds to enter the menu setting (short press the a key to enter the corresponding options, and then short press r key to enter the setting, short press the a or r key to adjust, and then press the r key to save.

SHOW ITEM	BUTTON FUNCTION	RANGES	DEFAULTS	REMARK
1CE	Temperature correction	-10.0 - 10.0 °C	0.0	Increase/decrease temperature value
2HE	Humidity correction	-20.0 - 20.0 %rh	0.0	Increase/decrease temperature value
3 ₫ F	Restore factory defaults	ON/OFF	OFF	Restore default parameters
ЧFE	Version number			

FUNCTION SETTINGS - In the temperature and humidity display interface, press the a key to enter the following settings (short press the a key to enter the corresponding selection then press e briefly to enter the setting, press the a or r keys briefly to adjust, and then press e key to save).

SHOW ITEMS	KEY FUNCTIONS	VALUE RANGE AND DESCRIPTION	DEFAULT
IEH	Upper limit of temperature alarm	(High temperature alarm value+1) 80°C	80.0
ZEL	Lower limit of temperature alarm	(Low temperature alarm value-1) -40 °C	-40
ЭНН	Humidity alarm upper limit	(High humidity alarm value+1) 99 %rh	99.9
HHL	Lower limit of humidity alarm	(Low humidity alarm value-1) 0.1 %rh	1.0
SAL	Alarm switch	ON/OFF	OFF
5Ad	FUNCTIONS NOT APPLICABLE	1-254	001
78-	FUNCTIONS NOT APPLICABLE	2.4/4.8/9.6/19.2	9.5

ALARM - To manage the alarm function (SAL), you can switch it on or off and set the upper and lower limits for temperature and relative humidity (RH) using the function settings (ICH, 2CL, 3HH, 4HL).

When the alarm is activated and either the upper or lower limit is reached for temperature (°C) or relative humidity (%RH), the LCD display will flash, and an audible alarm will sound. To silence the audible alarm, press any button on the rear control panel. Please note that silencing the alarm is temporary; it will reactivate if the temperature or humidity does not return to within the set parameters again.

GUARANTEE - This instrument carries a one-year guarantee against defects in either components or workmanship. During this period, products that prove to be defective will, at the discretion of ETI, be either repaired or replaced without charge. The product guarantee does not cover damage caused by fair wear and tear, abnormal storage conditions, incorrect use, accidental misuse, abuse, neglect, misapplication or modification. Full details of liability are available within ETI's Terms & Conditions of Sale at etiltd.com. In line with our policy of continuous development, we reserve the right to amend our product specification without prior notice.



